



Digital 6000 L 6000 | LM 6060 | LM 6061 | LM 6062

Quick Guide | Kurzanleitung | Guide rapide | Guida rapida | Guía de inicio rápido | Guia rápido | Beknopte handleiding | Krótka instrukcja obsługi | Snabbguide | Kort vejledning | Pikaohje | Γρήγορος οδηγός | Kısa Kılavuz | Краткая инструкция | 快速指南 | 快速使用指南 | クイックガイド | 요약 설명서

Setup

A (Correct installation) **B** (Incorrect installation)

100 - 240 V ~

Remote Network - Sennheiser WSM
www.sennheiser.com/wsm

RJ45

WSM

Torx 10

LM 6060* LM 6061* LM 6062*

* to be ordered separately

⏻	
☀️	Booting, firmware update
○	Ok
⚠️	
🔥	Slot fan damaged
●	Temp out of range, charging stopped

Factory reset

Charging

BA 60* BA 61* BA 62*

CLICK!

CLICK!

CLICK!

* to be ordered separately

🔋	
🔥	Temp out of range, charging stopped
●	Battery damaged
☀️	Battery in regeneration
🟡	Charging 0 % - 80 %
🟢	Charging 81 % - 96 %
🟩	Fully charged

Digital 6000 System Instruction Manual

Sennheiser Documentation App

Available on Google play

Available on the App Store

or online at www.sennheiser.com/download

Digital 6000_

Firmware Update

Always use the latest firmware of the L 6000 for full functionality. The latest firmware is available for download at:

www.sennheiser.com/download

Digital 6000_