 


Television
Téléviseur
Televisor digital a color con
pantalla de cristal líquido

Reference Guide
Manuel de référence
Guía de referencia

K-85XR70 / 85XR70C / 75XR70
K-75XR70C / 65XR70 / 65XR70C
K-55XR70 / 55XR70C

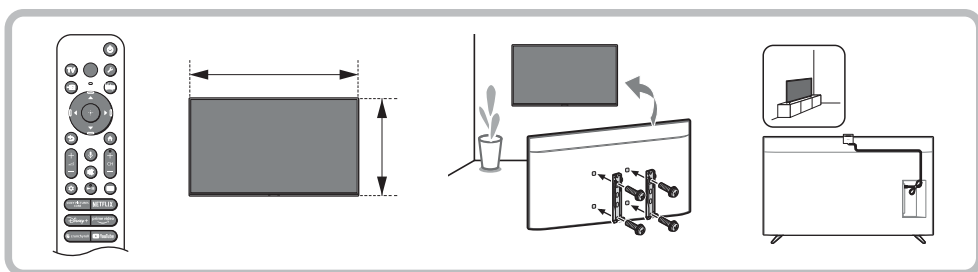

https://rd1.sony.net/help/tv/lus1n1/h\_us1n/

Read this manual before using this product

Lisez ce manuel avant d'utiliser le produit

Lea este manual antes de usar el producto

Sony Customer Support

U.S.A.: https://www.sony.com/tvsupport
Canada: https://www.sony.ca/support
U.S.A. Canada
1.800.222.SONY (7669) 1.877.899.SONY (7669)

Service à la clientèle Sony

Canada: https://www.sony.ca/support
États-Unis: https://www.sony.com/tvsupport
Canada États-Unis
1.877.899.SONY (7669) 1.800.222.SONY (7669)

Centro de Asistencia de Sony

https://esupport.sony.com/ES/LA/
Llame al número de teléfono que aparece en su tarjeta/póliza de garantía.


© 2024 Sony Corporation

Dimensions and weight (without Table-Top Stand) / Dimensiones y peso (sin soporte de sobremesa)

Table with dimensions and weight for models K-85XR70, K-85XR70C, K-75XR70, K-75XR70C, K-65XR70, K-65XR70C, K-55XR70, K-55XR70C.

\*1 (Approx. / Environ / Aprox.)

 Dimensions and weight (with Table-Top Stand) / Dimensiones et poids (avec support de table) / Dimensiones y peso (con soporte de sobremesa)

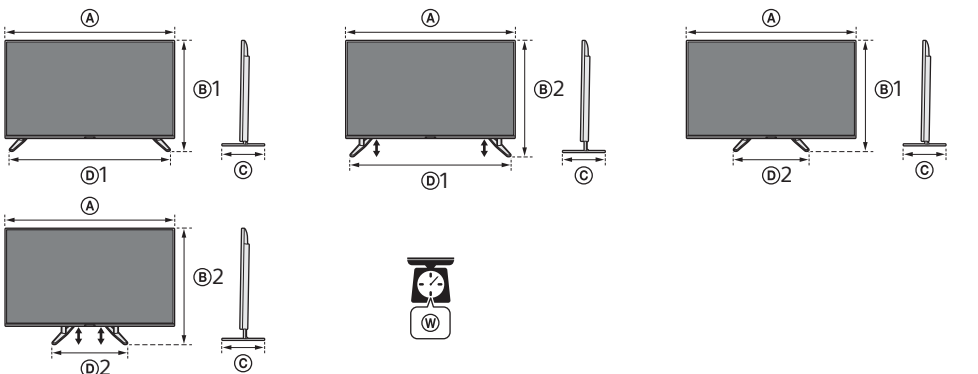


(mm)/(inches/pouces/pulgadas)\*1


Table with dimensions and weight for models K-85XR70, K-75XR70, K-65XR70, K-55XR70.

\*1 (Approx. / Environ / Aprox.)

 The length of the screw for Wall-Mount Bracket differs depending on the Wall-Mount Bracket thickness / La longueur des vis pour le support de fixation murale diffère selon l'épaisseur du support de fixation murale / La longitud del tornillo para el soporte de montaje mural varía dependiendo del espesor del soporte de montaje mural

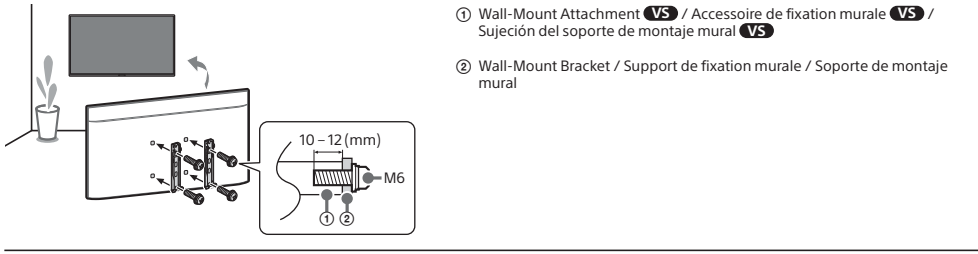

 Optional Camera and Microphone Unit (not supplied) Cable Management / Gestion du câble de la caméra avec microphone en option (non fourni) / Manejo del cable de la unidad de cámara y micrófono opcional (no suministrado)

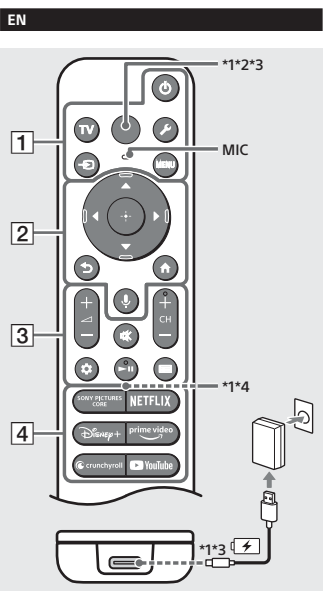

The remote control shape, layout, availability and function of remote control buttons may vary depending on your region/country/TV model/TV settings.

- 1 (Power) TV: Display TV channel list or switch to input.
2 (Quick settings): Display Quick Settings.
3 (Input): Display and select the input source, etc.
4 (MENU/Control menu): Display the Control menu.

Compatible Wall-Mount Bracket Information

For information on the following Sony Wall-Mount Bracket with your TV model.

Table listing compatible Sony Wall-Mount Bracket models and TV models.

- 1 Only for limited region/country/model.
2 For instructions on how to use the Wall-Mount Bracket with your TV please go to https://www.sony.com/am/support for your TV model and download "Wall-Mount Bracket".

To Customers: Sufficient expertise is required for TV installations. Be sure to subcontract the installation to a Sony dealer or licensed contractor and pay adequate attention to safety during the installation.

- 1 Only for limited region/country/model.
2 For more detailed information, visit Sony Customer Support website.

Before setting up your TV

Some TV models are packaged with a detached Table-Top Stand so you can mount your TV to a wall right away. See "Installing the TV to the Wall" if you want to mount the TV to a wall. If you are not mounting the TV to a wall, you will need to attach the Table-Top Stand (refer to the Setup Guide).

- 1 Disconnect all cables when carrying the TV.
2 Two or more persons (three or more persons for 214.8 cm (85 inches) and above TV) are needed to transport a large TV set.

Be sure to consider the following while setting up your TV.

- 1 Disconnect all cables when carrying the TV.
2 Two or more persons (three or more persons for 214.8 cm (85 inches) and above TV) are needed to transport a large TV set.

Be sure to consider the following while setting up your TV.

 
- 1 Disconnect all cables when carrying the TV.
2 Two or more persons (three or more persons for 214.8 cm (85 inches) and above TV) are needed to transport a large TV set.

Be sure to consider the following while setting up your TV.


- 1 Disconnect all cables when carrying the TV.
2 Two or more persons (three or more persons for 214.8 cm (85 inches) and above TV) are needed to transport a large TV set.

Be sure to consider the following while setting up your TV.

The length of the M6 machine screw differs according to the rope or chain diameter. Please refer to below illustration.

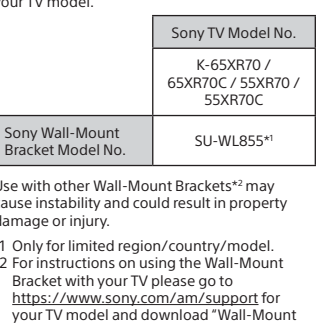

Anchor the TV to the wall by using bolts, wall anchor and chain (or rope).

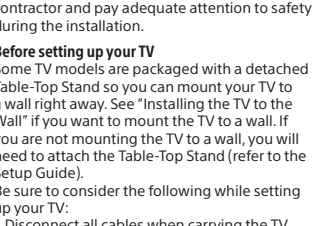

Note: Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.

Note: Read the supplied safety documentation for additional safety information.

For more detailed information, visit Sony Customer Support website.

\*1 Only for limited region/country/model.


1 Remove the screws from the rear of the TV.




Attach the Wall-Mount Attachment (supplied with the TV) to the rear of the TV (to make it parallel with the wall).



Attach the Wall-Mount Bracket (not supplied) using the screws (not supplied).

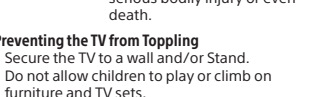

Attach the Wall-Mount Bracket (not supplied) using the screws (not supplied).

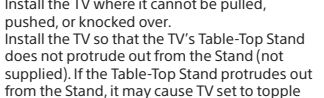

The BRAVIA® 4K TV Experience: Thank you for choosing Sony! Your new BRAVIA® TV opens the door to the "4K TV Experience". This document will help you get the most out of your TV.

This TV displays all video input signals in a resolution of 3 840 dots × 2 160 lines.

Note: Your TV is shipped with screws attached to the rear of the TV depending on the TV model.

Securing the TV: Sony strongly recommends taking measures to prevent the TV from toppling over.

Preventing the TV from Toppling: Do not allow children to play or climb on furniture and TV sets.

Fluorescent lamps can interfere with your remote control; try turning off the fluorescent lamps.

Installing the TV to the Wall: Using the optional Wall-Mount Bracket (SU-WL855 only)\* (not supplied).

To Customers: For product protection and safety reasons, Sony strongly recommends that installation of your TV be performed by Sony dealers or licensed contractors.

To Sony Dealers and Contractors: Provide full attention to safety during the installation; periodic maintenance and examination of this product.

Wall-Mount Bracket Installation Information: For instructions on Wall-Mount Bracket installation, see the Installation Information (Wall-Mount Bracket) on the Sony Customer Support website for your TV model at the following address.

 
Note: This product uses the following module for wireless functionalities: Model: J20H03 Brand: FOXCONN

Note: This product uses the following device for wireless functionalities: Model: UE87B Brand: UEI


Note: Use the following device for wireless functionalities: Model: UE87B Brand: UEI

Supplier's Declaration of Conformity: Trade Name: SONY Model: K-85XR70 / K-85XR70C / K-75XR70 / K-75XR70C / K-65XR70 / K-65XR70C / K-55XR70 / K-55XR70C Responsible Party: Sony Electronics Inc. Address: 16535 Via Esplanade, San Diego, CA 92127 U.S.A. Telephone Number: 858-942-2230

The length of the M6 machine screw differs according to the rope or chain diameter. Please refer to below illustration.

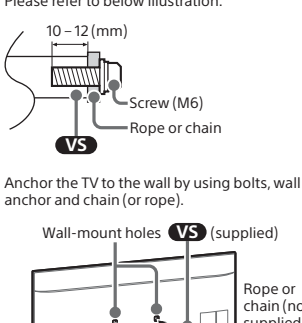

 Anchor the TV to the wall by using bolts, wall anchor and chain (or rope).

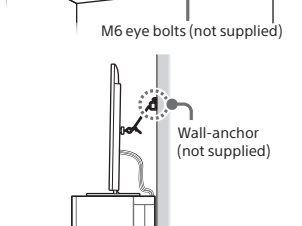


Note: Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.

Note: Read the supplied safety documentation for additional safety information.


For more detailed information, visit Sony Customer Support website.

\*1 Only for limited region/country/model.

 1 Remove the screws from the rear of the TV.



 Attach the Wall-Mount Attachment (supplied with the TV) to the rear of the TV (to make it parallel with the wall).



Attach the Wall-Mount Bracket (not supplied) using the screws (not supplied).



Attach the Wall-Mount Bracket (not supplied) using the screws (not supplied).



The BRAVIA® 4K TV Experience: Thank you for choosing Sony! Your new BRAVIA® TV opens the door to the "4K TV Experience". This document will help you get the most out of your TV.

This TV displays all video input signals in a resolution of 3 840 dots × 2 160 lines.

Note: Your TV is shipped with screws attached to the rear of the TV depending on the TV model.

Securing the TV: Sony strongly recommends taking measures to prevent the TV from toppling over.

Preventing the TV from Toppling: Do not allow children to play or climb on furniture and TV sets.

Fluorescent lamps can interfere with your remote control; try turning off the fluorescent lamps.

Installing the TV to the Wall: Using the optional Wall-Mount Bracket (SU-WL855 only)\* (not supplied).

To Customers: For product protection and safety reasons, Sony strongly recommends that installation of your TV be performed by Sony dealers or licensed contractors.

To Sony Dealers and Contractors: Provide full attention to safety during the installation; periodic maintenance and examination of this product.

Wall-Mount Bracket Installation Information: For instructions on Wall-Mount Bracket installation, see the Installation Information (Wall-Mount Bracket) on the Sony Customer Support website for your TV model at the following address.

Note: This product uses the following module for wireless functionalities: Model: J20H03 Brand: FOXCONN


Note: This product uses the following device for wireless functionalities: Model: UE87B Brand: UEI

Note: Use the following device for wireless functionalities: Model: UE87B Brand: UEI

Supplier's Declaration of Conformity: Trade Name: SONY Model: K-85XR70 / K-85XR70C / K-75XR70 / K-75XR70C / K-65XR70 / K-65XR70C / K-55XR70 / K-55XR70C Responsible Party: Sony Electronics Inc. Address: 16535 Via Esplanade, San Diego, CA 92127 U.S.A. Telephone Number: 858-942-2230

Refer to the following table for the wall-mount hole pattern.

 Table with dimensions and hole patterns for wall-mounting.

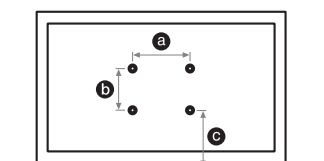


Note: Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.

Note: Read the supplied safety documentation for additional safety information.


For more detailed information, visit Sony Customer Support website.

\*1 Only for limited region/country/model.

 
1 Remove the screws from the rear of the TV.



 
Attach the Wall-Mount Attachment (supplied with the TV) to the rear of the TV (to make it parallel with the wall).



 Attach the Wall-Mount Bracket (not supplied) using the screws (not supplied).



 Attach the Wall-Mount Bracket (not supplied) using the screws (not supplied).



The BRAVIA® 4K TV Experience: Thank you for choosing Sony! Your new BRAVIA® TV opens the door to the "4K TV Experience". This document will help you get the most out of your TV.

This TV displays all video input signals in a resolution of 3 840 dots × 2 160 lines.

Note: Your TV is shipped with screws attached to the rear of the TV depending on the TV model.

Securing the TV: Sony strongly recommends taking measures to prevent the TV from toppling over.

Preventing the TV from Toppling: Do not allow children to play or climb on furniture and TV sets.

Fluorescent lamps can interfere with your remote control; try turning off the fluorescent lamps.

Installing the TV to the Wall: Using the optional Wall-Mount Bracket (SU-WL855 only)\* (not supplied).

To Customers: For product protection and safety reasons, Sony strongly recommends that installation of your TV be performed by Sony dealers or licensed contractors.

To Sony Dealers and Contractors: Provide full attention to safety during the installation; periodic maintenance and examination of this product.

Wall-Mount Bracket Installation Information: For instructions on Wall-Mount Bracket installation, see the Installation Information (Wall-Mount Bracket) on the Sony Customer Support website for your TV model at the following address.

Note: This product uses the following module for wireless functionalities: Model: J20H03 Brand: FOXCONN

Note: This product uses the following device for wireless functionalities: Model: UE87B Brand: UEI

Note: Use the following device for wireless functionalities: Model: UE87B Brand: UEI

Supplier's Declaration of Conformity: Trade Name: SONY Model: K-85XR70 / K-85XR70C / K-75XR70 / K-75XR70C / K-65XR70 / K-65XR70C / K-55XR70 / K-55XR70C Responsible Party: Sony Electronics Inc. Address: 16535 Via Esplanade, San Diego, CA 92127 U.S.A. Telephone Number: 858-942-2230

Visit Sony support website (information contained on the front cover of this manual). 5. Perform the factory data reset.

When you plug in the TV, the TV may not be able to turn on for a while even if you press the power button on the remote control or the TV. It takes time to initialize the system. Wait for about one minute, then operate it again.

How to reset the TV to factory settings: WARNING: The reset will clear all of your customized settings including the parental lock setting.

To force factory data reset, unplug the AC power cord. Press and hold Q button on the TV, then plug in the AC power cord.

For security purposes, be sure to remove all personal and account information before discarding, selling or passing your TV to someone else by: unlinking/unregistering, signing out and deactivating all network services as well as factory reset the TV.

The remote control does not function: Replace the batteries (except RMF-TX920U). Check if the insulating sheet is removed from the remote control (RMF-TX920U only).

The parental lock password has been forgotten: Enter 4357 for the PIN and enter the new PIN.

For more information, refer to the Help Guide. Press [H] (Input) on the remote control and select [Help]. [H] Help does not exist. select [Edit] and add [Help].

Specifications

System: NTSC: National Television System Committee ATSC: ATSC Terrestrial NEXTGEN TV: ATSC 3.0 compliant (Single tuner)\*

Power and requirements: 100 V ~ 240 V AC, 50/60 Hz (U.S.A./Canada 120 V AC, 60 Hz)

Power consumption: In use (W): K-85XR70 / 85XR70C: 374 K-75XR70 / 75XR70C: 339 K-65XR70 / 65XR70C: 281 K-55XR70 / 55XR70C: 219

Power and requirements: 100 V ~ 240 V AC, 50/60 Hz (U.S.A./Canada 120 V AC, 60 Hz)

Power consumption: In use (W): K-85XR70 / 85XR70C: 374 K-75XR70 / 75XR70C: 339 K-65XR70 / 65XR70C: 281 K-55XR70 / 55XR70C: 219

Power and requirements: 100 V ~ 240 V AC, 50/60 Hz (U.S.A./Canada 120 V AC, 60 Hz)

Power consumption: In use (W): K-85XR70 / 85XR70C: 374 K-75XR70 / 75XR70C: 339 K-65XR70 / 65XR70C: 281 K-55XR70 / 55XR70C: 219

Power and requirements: 100 V ~ 240 V AC, 50/60 Hz (U.S.A./Canada 120 V AC, 60 Hz)

Power consumption: In use (W): K-85XR70 / 85XR70C: 374 K-75XR70 / 75XR70C: 339 K-65XR70 / 65XR70C: 281 K-55XR70 / 55XR70C: 219

Power and requirements: 100 V ~ 240 V AC, 50/60 Hz (U.S.A./Canada 120 V AC, 60 Hz)

Power consumption: In use (W): K-85XR70 / 85XR70C: 374 K-75XR70 / 75XR70C: 339 K-65XR70 / 65XR70C: 281 K-55XR70 / 55XR70C: 219

Power and requirements: 100 V ~ 240 V AC, 50/60 Hz (U.S.A./Canada 120 V AC, 60 Hz)

Power consumption: In use (W): K-85XR70 / 85XR70C: 374 K-75XR70 / 75XR70C: 339 K-65XR70 / 65XR70C: 281 K-55XR70 / 55XR70C: 219

Power and requirements: 100 V ~ 240 V AC, 50/60 Hz (U.S.A./Canada 120 V AC, 60 Hz)

Power consumption: In use (W): K-85XR70 / 85XR70C: 374 K-75XR70 / 75XR70C: 339 K-65XR70 / 65XR70C: 281 K-55XR70 / 55XR70C: 219

Power and requirements: 100 V ~ 240 V AC, 50/60 Hz (U.S.A./Canada 120 V AC, 60 Hz)

Power consumption: In use (W): K-85XR70 / 85XR70C: 374 K-75XR70 / 75XR70C: 339 K-65XR70 / 65XR70C: 281 K-55XR70 / 55XR70C: 219

Power and requirements: 100 V ~ 240 V AC, 50/60 Hz (U.S.A./Canada 120 V AC, 60 Hz)

Power consumption: In use (W): K-85XR70 / 85XR70C: 374 K-75XR70 / 75XR70C: 339 K-65XR70 / 65XR70C: 281 K-55XR70 / 55XR70C: 219

Power and requirements: 100 V ~ 240 V AC, 50/60 Hz (U.S.A./Canada 120 V AC, 60 Hz)

Power consumption: In use (W): K-85XR70 / 85XR70C: 374 K-75XR70 / 75XR70C: 339 K-65XR70 / 65XR70C: 281 K-55XR70 / 55XR70C: 219

Power and requirements: 100 V ~ 240 V AC, 50/60 Hz (U.S.A./Canada 120 V AC, 60 Hz)

Power consumption: In use (W): K-85XR70 / 85XR70C: 374 K-75XR70 / 75XR70C: 339 K-65XR70 / 65XR70C: 281 K-55XR70 / 55XR70C: 219

Power and requirements: 100 V ~ 240 V AC, 50/60 Hz (U.S.A./Canada 120 V AC, 60 Hz)

For Your Convenience

Online Registration: Be sure to register your TV.

U.S.A.: https://productregistration.sony.com

Canada: https://www.sony.ca/registration

Online Registration: Be sure to register your TV.

U.S.A.: https://productregistration.sony.com

Canada: https://www.sony.ca/registration

For Your Convenience

Online Registration: Be sure to register your TV.

U.S.A.: https://productregistration.sony.com

Canada: https://www.sony.ca/registration

For Your Convenience

Online Registration: Be sure to register your TV.

U.S.A.: https://productregistration.sony.com

Canada: https://www.sony.ca/registration

For Your Convenience

Online Registration: Be sure to register your TV.

U.S.A.: https://productregistration.sony.com

Canada: https://www.sony.ca/registration

For Your Convenience

Online Registration: Be sure to register your TV.

U.S.A.: https://productregistration.sony.com

Canada: https://www.sony.ca/registration

For Your Convenience

Online Registration: Be sure to register your TV.

U.S.A.: https://productregistration.sony.com

Canada: https://www.sony.ca/registration

For Your Convenience

Online Registration: Be sure to register your TV.

U.S.A.: https://productregistration.sony.com

Canada: https://www.sony.ca/registration

For Your Convenience

Online Registration: Be sure to register your TV.

U.S.A.: https://productregistration.sony.com

Canada: https://www.sony.ca/registration

For Your Convenience



