

## Source Label Installation

Note: Source labels must be inserted prior to installing the trim plate on the keypad.

1. Determine the system's source names and numbers (e.g., CD, Source 1).
2. Select the corresponding source name label from the included label sheets. Left-side labels are used for sources 1, 3 and 5; right-side labels are used for sources 2, 4 and 6.
3. Slide the label into the window slot until the source name is centered in the window.

| Russound KP6/KP4 Source Labels |      |          |        |
|--------------------------------|------|----------|--------|
| CD 1                           | CD   | SERVER 1 | CABLE  |
| CD 2                           | DVD  | SERVER 2 | VCR    |
| AM/FM                          | TAPE | SERVER 3 | DVR    |
| AM/FM 1                        | SAT  | iPod     | XM 2   |
| AM/FM 2                        | XM 1 | RADIO    | SIRIUS |

## User Options Mode


The User Options Mode allows the user to adjust the audio properties of a particular zone. The audio features that can be adjusted are: Bass, Treble, Balance, Turn On Volume and Loudness.

To enter the User Options Mode, press and hold the Source button when the zone is on. To exit the mode, press and hold the Source button again (or wait for a 9-second timeout).

The first four source buttons double as indicators for audio feature selection. When entering the User Options Mode, the top left

(Source 1) button will temporarily blink to indicate "Bass" is ready for adjustment. Subsequent presses of the Source button toggle through Treble (Source 2), Balance (Source 3), Turn On Volume (Source 4), and Loudness (blue LED).

Once an option is selected, the volume up/down buttons are used to adjust settings. The volume indicator LEDs temporarily light to indicate the option setting. When Loudness is turned on, the blue LED lights solid.

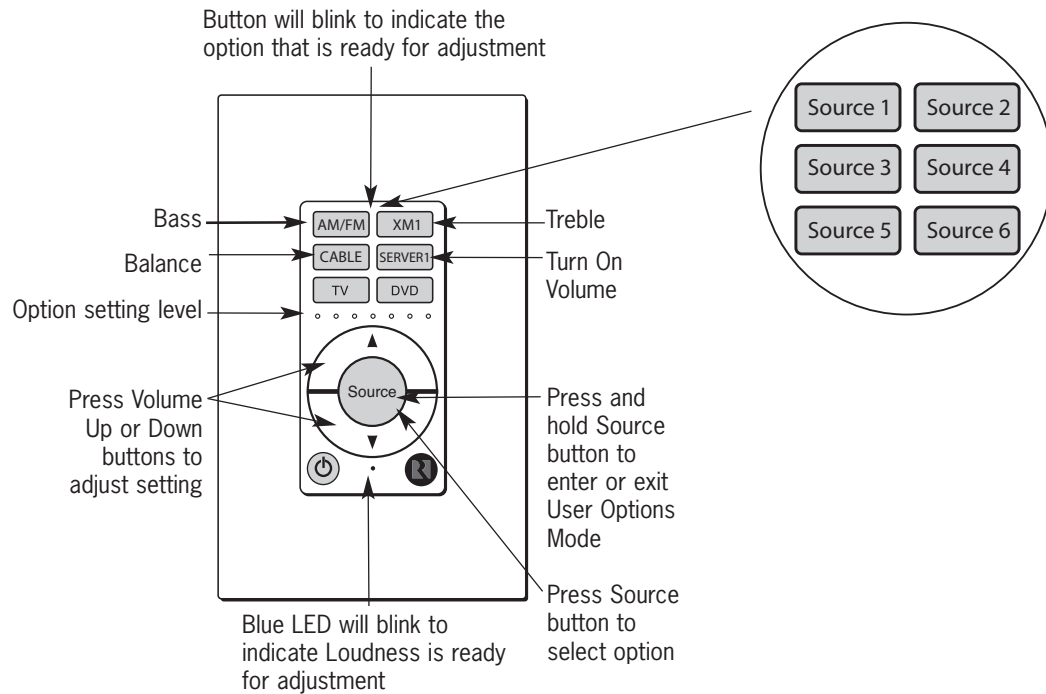

## Technical Specifications

**Dimensions:** 1.85"W x 2.7"D x 1.47"H  
(4.7 x 6.9 x 3.7 cm)  
Fits 1 Gang UL/CSA Approved 18 ci Junction Box

**Weight:** 4.0 oz. (113 g)

**Power Requirements:** 12 VDC 180mA

**CAT-5 Connection:** 110 punchdown

## Warranty Repair

The Russound KP6/4 is fully guaranteed against all defects in materials and workmanship for two (2) years from the date of purchase. During this period, Russound will replace any defective parts and correct any defect in workmanship without charge for either parts or labor.

For this warranty to apply, the unit must be installed and used according to its written instructions. If service is necessary, it must be performed by Russound. The unit must be returned to Russound at the owner's expense and with prior written permission. Accidental damage and shipping damage are not considered defects, nor is damage resulting from abuse or from servicing by an agency or person not specifically authorized in writing by Russound.

This Warranty does not cover: Damage caused by abuse, accident, misuse, negligence, or improper installation or operation; Power surges and lightning strikes; Normal wear and maintenance; Products that have been altered or modified; Any product whose identifying number, decal, serial number, etc. has been altered, defaced or removed.

Russound sells products only through authorized Dealers and Distributors to ensure that customers obtain proper support and service. Any Russound product purchased from an unauthorized dealer or other source, including retailers, mail order sellers and online sellers will not be honored or serviced under existing Russound warranty policy. Any sale of products by an unauthorized source or other manner not authorized by Russound shall void the warranty on the applicable product.

Damage to or destruction of components due to application of excessive power voids the warranty on those parts. In these cases, repairs will be made on the basis of the retail value of the parts and labor. To return for repairs, the unit must be shipped to Russound at the owner's expense, along with a note explaining the nature of service required. Be sure to pack the unit in a corrugated container with at least three (3) inches of resilient material to protect the unit from damage in transit.

Before returning a unit for repair, call Russound at (603) 659-5170 for a Return Authorization number. Write this number on the shipping label and ship to: Russound, ATTN: Service, 5 Forbes Road, Newmarket, NH 03857

Due to continual efforts to improve product quality as new technology and techniques become available, Russound/FMP, Inc. reserves the right to revise system specifications without notice.

All trademarks are property of their respective owners.

**Russound**


5 Forbes Road, Newmarket, NH 03857  
tel 603.659.5170 • fax 603.659.5388  
e-mail: tech@russound.com  
www.russound.com

28-1201 07/29/05

# KP6/KP4 Keypad

The KP6/KP4 keypad is an in-wall Decora® style, single-gang keypad designed for individual zone control of CAA66/CAS44 distributed audio systems (wall plate not included). It has amber backlit, soft-touch volume, power and source select buttons. The KP6 keypad supports the KPSC keypad to add source control and numeric control capability.


## KP6 Keypad Front Panel

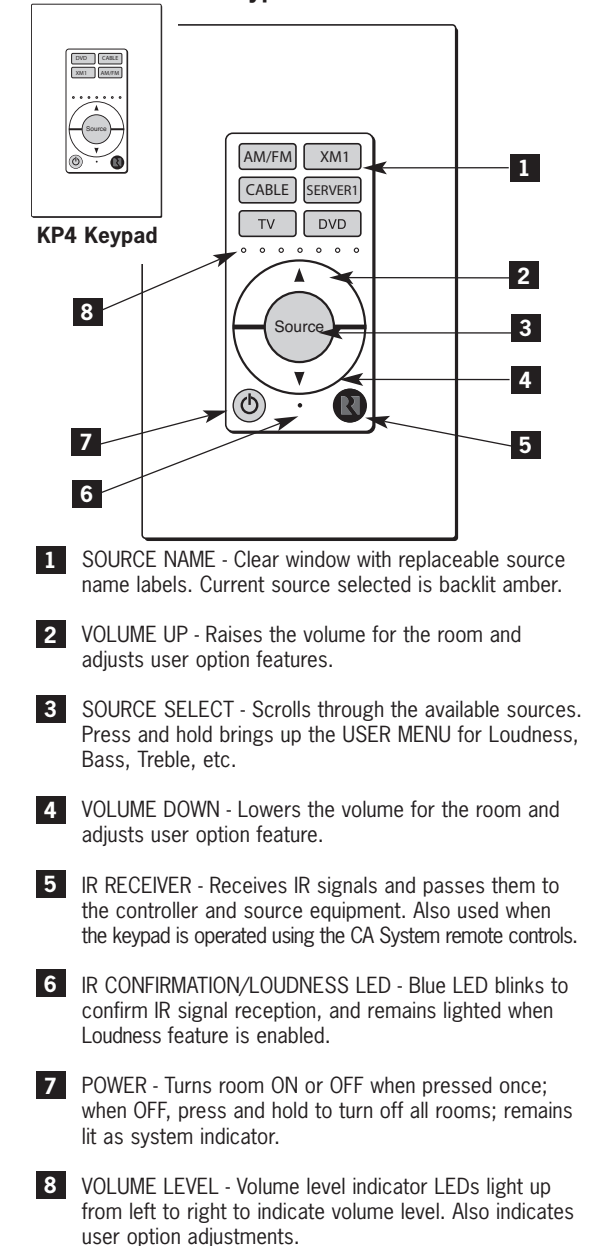

## KP6/KP4 Side Panel

The KP6/KP4 OS update jumper and KPSC 12-pin header are located on the right side of the keypad (when facing front). These are covered when a trim plate is installed.

- 1** OS UPDATE/RUN JUMPER -The pins are jumpered only when performing an OS update on the keypad, and removed during normal operation.
- 2** KPSC PORT (KP6 only) - 12-pin header for connection to KPSC source control keypad.
- 3** OS UPDATE PORT - Used to update the KP6/KP4 keypad operating system firmware. If an update is released, it will be available online through the Document Center on [www.russound.com](http://www.russound.com). Look in the "Firmware and Downloads" section under Multi-Zone product type. The Advanced Programming Cable is available from Russound, Part #2500-521065.

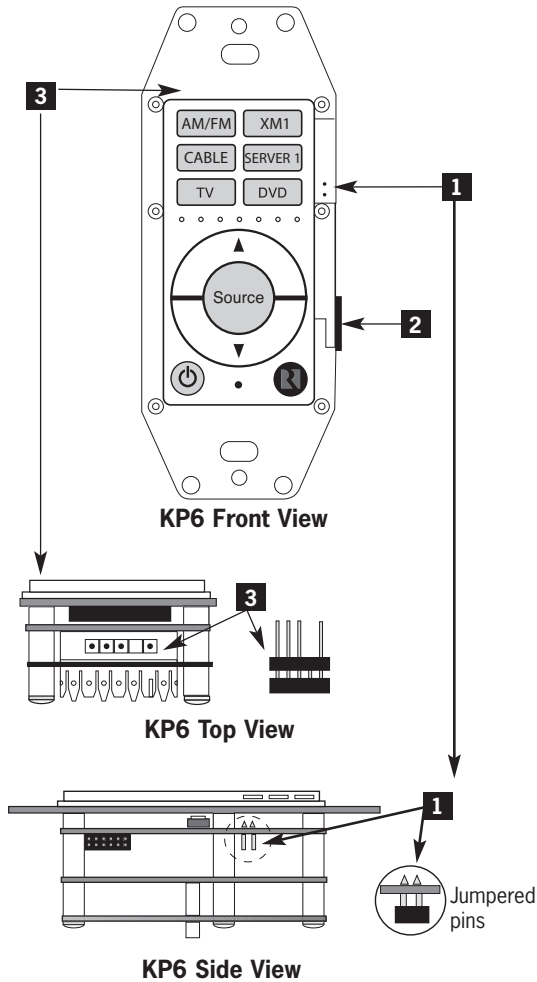



## KP6/KP4 Back Panel

The KP6/KP4 keypad uses a 110-punchdown terminal on the back panel to provide a simple installation and strong connection for CAT-5 cable's eight conductors. Punchdown terminals require the use of a punchdown tool. Attach the CAT-5 cable to the 110-punchdown terminal on the KP6/KP4 keypad as shown, matching the conductor colors to the connection color guide. The keypad will not operate properly if the terminations deviate from the required connection order.

Take care when using an impact 110 punchdown tool, as this may overspread the contact points. Be sure to use the lowest setting. Use of the impact tool may propel stray bits of wire and jacket into the keypad's chassis and possibly cause a short in the circuitry. Gently shake or blow air through the keypad chassis to remove stray wire before the keypad is installed into the junction box.

## Keypad Installation

1. Check whether or not you can route the wire to the location you have chosen.
2. To install a single-gang keypad, you will need to use a UL/CSA approved plastic single-gang (18 ci) electrical box.
3. Route CAT-5 wire to the junction box from the CA system controller.
4. Use a 110 punchdown tool to connect each wire to its corresponding color labeled on the punchdown terminal.
5. Mount the keypad in the electrical box, add the source name labels and attach the trim plate.

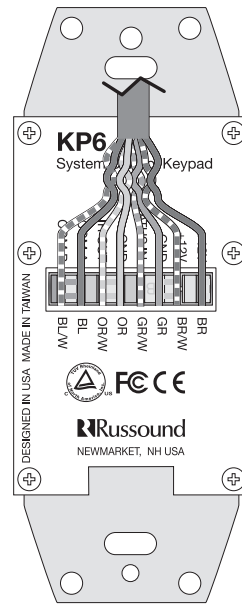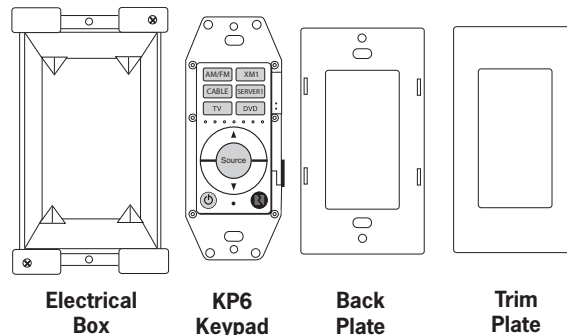


CAT-5 to KP6 Connection

## KP6 Keypad to CA Controller Connection

Each keypad connects to a Keypad Port on the back of the controller (CAA66 controller shown below). Connections are made using CAT-5 cable with an RJ45 connector (wiring scheme shown below).

An SA-ZX3 Keypad Splitter can be used to add additional keypads to each zone.

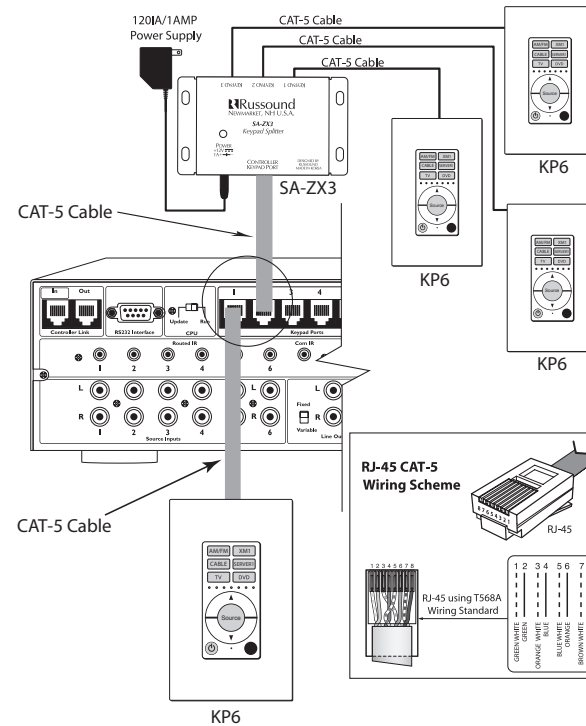

## Safety Instructions

1. Read Instructions - All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the appliance in the operating instructions should be adhered to.
4. Follow Instructions - All operating and user instructions should be followed.
5. Water and Moisture - The appliance should not be used near water; for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
6. Wall Mounting - The appliance should be mounted to a wall only as recommended by the manufacturer.
7. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings, or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
8. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
9. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
10. Grounding or Polarization - Precaution should be taken so that the grounding or polarization means of an appliance is not defeated.
11. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through the openings.
12. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
  - A. Objects have fallen, liquid has been spilled into the appliance; or
  - B. The appliance has been exposed to rain; or
  - C. The appliance does not appear to operate normally; or
  - D. The appliance has been dropped or the enclosure is damaged.
13. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

## Precautions:

1. Power – WARNING: BEFORE TURNING ON THE POWER FOR THE FIRST TIME, READ THE FOLLOWING SECTION CAREFULLY.
2. Do Not Touch The Unit With Wet Hands – Do not handle the unit when your hands are wet or damp. If water or any other liquid enters the unit's cabinet, take it to a qualified service person for inspection.
3. Care – From time to time you should wipe off the front panel of the cabinet with a soft cloth. Do not use rough material, thinners, alcohol or other chemical solvents or cloths since this may damage the finish or remove the panel lettering.



Conforms to UL 6500 Certified to CAN/CSA