

F/W Upgrade Guide

SAMSUNG

Samsung Electronics


Step1. How to prepare the USB Memory Drive

1. Download the firmware file from Samsung.com into your computer.
File Name : **SAT-iMX8M23WWC_10xx.x_USB.zip**

2. Connect the USB Memory Drive to the USB port of your PC.
Copy the file to USB Memory Drive.

3. Follow below steps to extract the file and make a folder for firmware.
The folder should have same name with the file and exist in the root directly
※ An extracting process might be different by application in PC

3-A. Click the file and 'Extract All...'. Then select USB driver that files will be extracted.

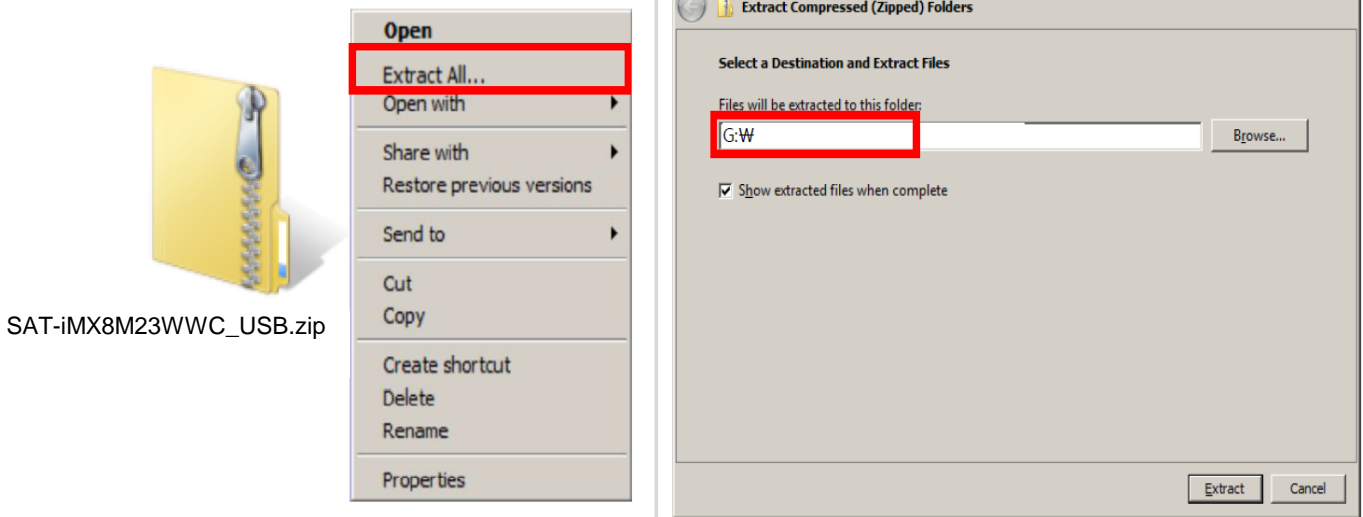

3-B. Make sure that USB Driver has a folder named 'SAT-iMX8M23WWC'.



4. Safely disconnect the USB memory drive by clicking in 'Safely Remove' in Task Bar.

Step2. How to upgrade the Firmware by USB (For HW-Q9**C/Q8**C/Q7**C)

1. Turn on the Soundbar and insert the USB drive into the SERVICE port located on the bottom of the Main Unit. The software will begin to update automatically in less than one minute.
2. A sequence of "UPDATE" → "BYE" → "ON" will appear on the display 3 times. It would take around 6 minutes
3. After the 3 cycles are complete, the Soundbar will restart and last source used will appear on the display for about 20 seconds and then it will go off



("UPDATE → BYE → ON") 3 times → "D.IN" → OFF

※ Cycle and duration of update may differ by models

※ Important

. Please DO NOT turn off the power or remove the USB while the update.