

WIREFATH

BULK WIRE

WP-TOOL-RJ45-90-6/WP-TOOL-RJ45-90-6A/WP-TOOL-RJ45-180



CAT 6a 90deg




Cat 5e/6 180deg




Cat 5e/6 90deg

Keystone Jack Termination Instructions

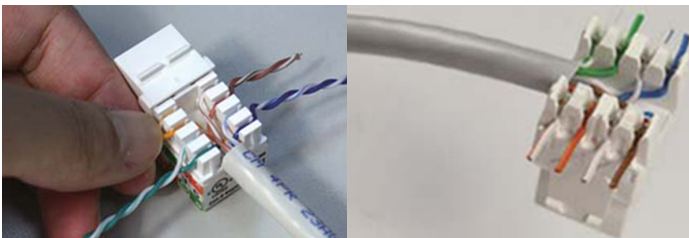

1. Seat each wire in place according to the color scheme map on the side of the keystone.

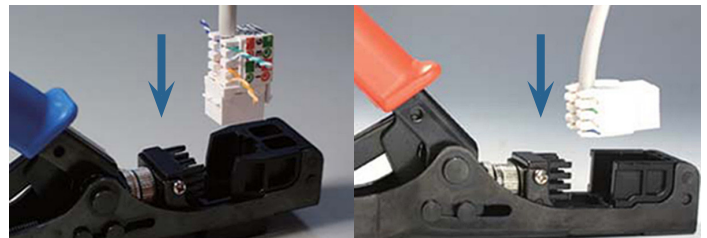

2. Place the Keystone Jack into the crimp tool. Ensure the keystone is completely seated in the tool before crimping.



3. Squeeze the handle firmly and completely to ensure a clean cut of all wires.



4. Release the handle and remove the terminated keystone jack. Secure the cap to the back of the keystone, and it is ready for installation.